

# Photon 300 Installation & Quick Start Guide

To install the Photon 300 and get started:


1. Connect power.
2. Connect the Photon 300 to the network.
3. Access the Photon 300.
4. Change the management configuration.
5. Access the Stellar Cyber UI.

## Connecting Power

To connect power to the appliance:

1. Connect the included power cable to the power source.
2. Connect the cable to the Photon 300.
3. Press the power switch on the back of the Photon 300.

## Connecting to the Network

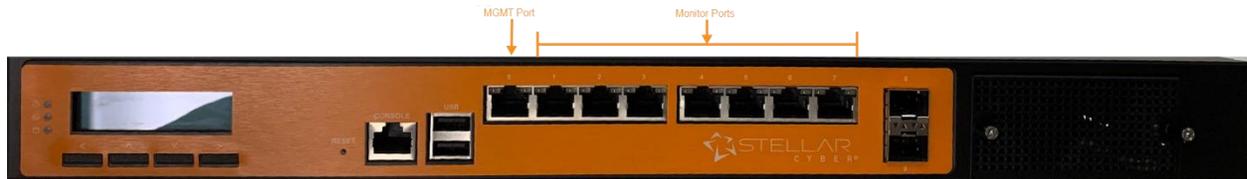

To connect the Photon 300 to the network:

1. Connect port 0 to a network accessible by the DP.
2. Use the other ports to connect to data sources (mirror ports or taps).

## Accessing the Photon 300

You can access the appliance through the console port or using SSH.

### Console Access

To access via console, connect an RJ45 serial cable to the RJ45 console port. Configure the port settings to:

- Serial port speed: 9600
- Data Bits: 8
- Parity: None
- Stop Bits: 1
- Flow Control: None

## SSH Access

The default management IP address on the appliance is **192.168.1.100/24**, and the default gateway IP address is: **192.168.1.1**. The default username is **aella** and the password is **changeme**.

For SSH access to the appliance:

```
ssh -l aella 192.168.1.100
```

## Changing the Management Configuration

Change the default management configuration. From the console or an SSH session:

1. Log in with the default username of **aella** and password of **changeme**.
2. You are immediately prompted to change the password.
3. Change the management IP address:  

```
set interface management ip <new management IP address>/<netmask>
```
4. Change the gateway IP address:  

```
set interface management gateway <new gateway IP address>
```
5. Change the DNS IP address:  

```
set interface management dns <new DNS server IP address>
```
6. Confirm your changes with the `show interface`, `show gateway`, and `show dns` commands.
7. Set the host name, which is displayed in Stellar Cyber and should be unique for each sensor:  

```
set hostname <new hostname>
```
8. If necessary, set the proxy HTTP server:  

```
set proxy http://<proxy IP address:port>
```
9. Optionally assign the tenant (if you skip this, the sensor is assigned to Root Tenant):  

```
set tenant_id <Tenant ID from Stellar Cyber>
```
10. Set the IP address of the DP:  

```
set cm <DP IP address>
```

## Accessing Stellar Cyber

To log in to the Stellar Cyber UI, use Chrome or Firefox (the default User is **admin**, and the default Password is **changeme**):

```
https://<Data Processor Management IP Address>
```

Go to **Collect | Sensor Overview** and authorize the sensor.